


VALANCE ATTACHMENT

Your blinds will be shipped with either valance clips for attaching the valance.

VALANCE CLIPS:

Install one clip on each end and space any others evenly in between, no more than 48" apart. **Important:** Install the valance clips *before* mounting the headrail. (Fig. 10)

Then, after mounting the headrail, attach the valance. Simply snap the valance into the valance clips.

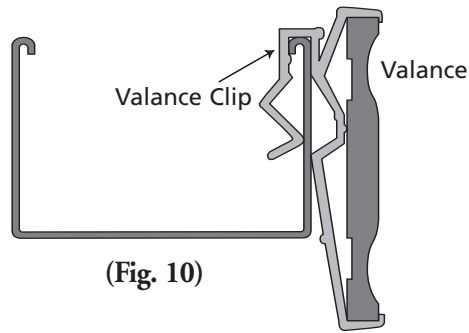


PVC Horizontals Use a 2 Slat Valance system.

HOLD DOWN BRACKETS

Made of molded clear plastic. Fits into predrilled hole in the bottom rail to secure the bottom rail in place. (Generally used on door shades.) (Fig. 12)

(Fig. 12)

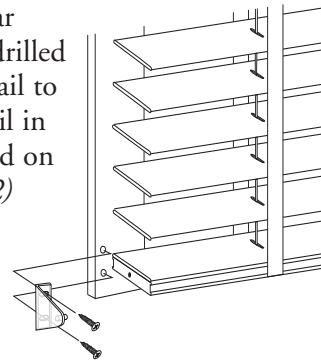

CARE AND CLEANING

DUSTING

Like all wood furnishings, wood blinds should be dusted regularly to keep them looking new. Use a soft, clean cloth, dusting mitt, or chemically treated dust cloth.

Lower the blind to its full length, tilt the slats almost all the way down and dust. Then tilt the slats almost all the way up and dust. (Not fully closing the slats allows dusting where the slats overlap.)

VACUUMING

Blinds may also be cleaned by vacuuming them with the brush attachment of a vacuum cleaner, tilting the blinds open and closed as just described.

DAMP CLEANING

Another way to clean blinds is simply by wiping them with a soft, damp rag.

TREATING STAINED BLINDS

Like wood furniture, stained blinds should be treated periodically, with lemon oil or other wood preservative to protect their finish and enhance their luster.


Important: Ultra sonic cleaning of wood blinds is not recommended.

CHILD SAFETY

An important consideration in any blind installation is child safety. To prevent serious injuries or strangulations, all cords must be kept out of the reach of children.

HORIZONTAL BLINDS

INSTALLATION INSTRUCTIONS

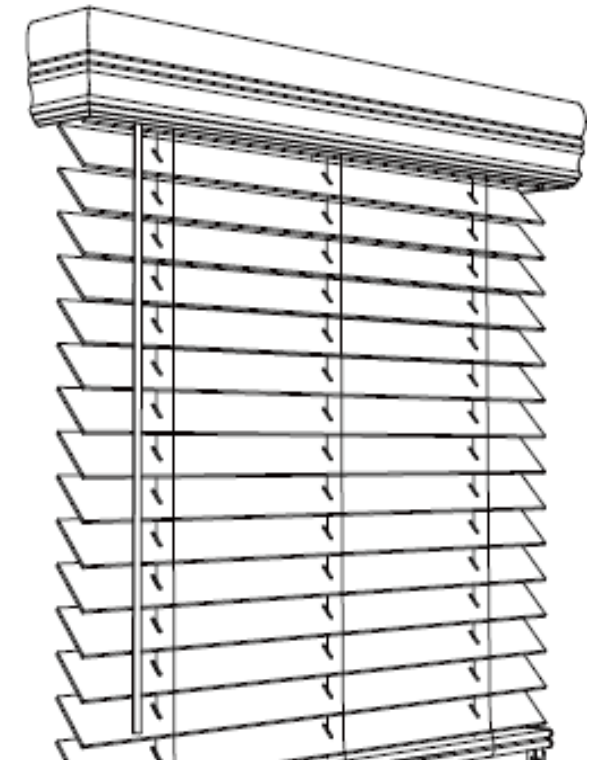

⚠ WARNING:


Young children can become entangled and strangle in cords. Keep all cords out of the reach of children.

MOUNTING BRACKETS

The box style mounting brackets are designed to work in all possible mounting applications. The diagram on the next page indicates which screw holes to use for each option. (Fig. 4)

Mount brackets as shown below. Always use all brackets supplied. Blinds over 48" wide must have one support bracket, and blinds over 72" wide must have two. Space the support brackets as evenly as possible between the two end brackets. There should be no more than 48" between any two brackets.


Important: Avoid positioning support brackets in line with blind ladders or tapes. If center supports are required, Use two screws to attach each support bracket. Locate the screws diagonally. Make sure the support bracket's top and back surfaces are aligned with the top and back surfaces of the two installation brackets. (Fig. 1)

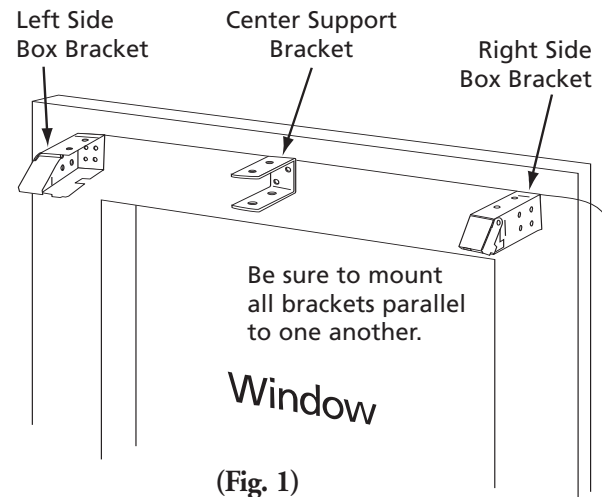


(Fig. 1)

OUTSIDE MOUNT

First, mark where to attach the two installation brackets. Hold the blind up to the window in the position where you want it installed. With the blind centered and level, mark the surface 1/4" past each end of the headrail. (Fig. 2)

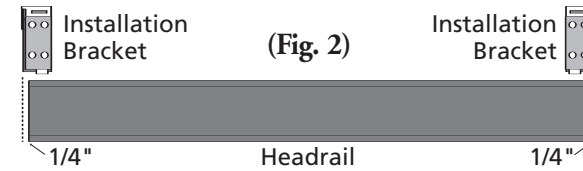


Attach the installation brackets to the wall or molding with two screws. Position the screws diagonally, as shown. Note that spacers are used with 2 1/2" blinds only. (Fig. 3)

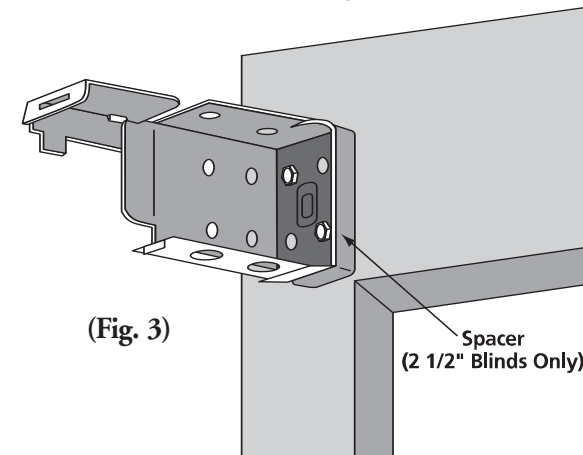

(Fig. 3)

SCREW HOLES

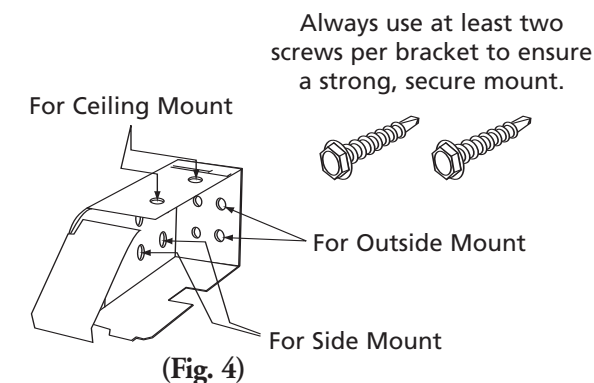

(Fig. 4)


BRACKETS REQUIRED

All blinds require two end brackets.

All 2 on 1's receive 1 center support bracket.
All 3 on 1's receive 2 support brackets. Center support brackets for 2 on 1's and 3 on 1's should be placed between panels.

Blind Width	# of Center Support Brackets
Over 48"	1
Over 72"	2

Position the headrail in the box brackets as shown (Fig. 5). Swing the covers down and snap them closed. **Important:** Attach the valance clips before installing the headrail. See the "Valance Attachment" section on the next page.

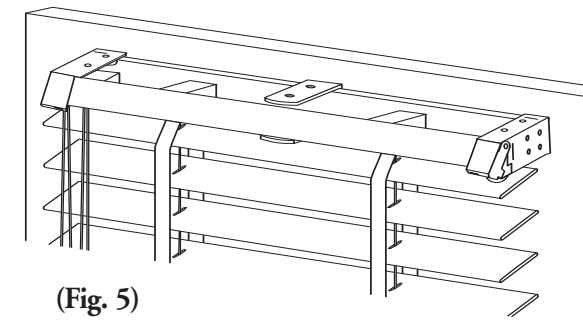

(Fig. 5)


2 1/2" BLIND INSTALLATION NOTE

SPACER BLOCKS

The slat on a 2 1/2" blind extends beyond the back of the headrail.


Spacer blocks must be used for all outside mount applications. Use two (2) spacer blocks for each installation bracket.

For inside mount applications there must be a minimum of 1/4" between the back of the headrail and any obstruction.

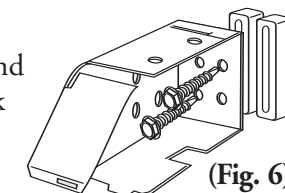

(Fig. 6)

TILT WAND ATTACHMENT

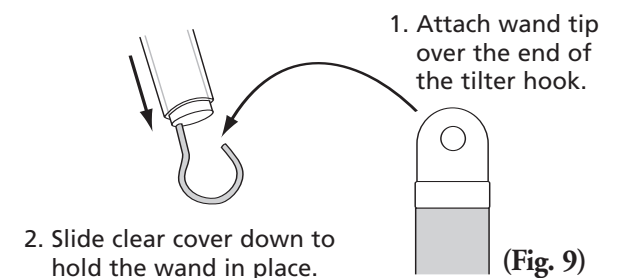

(Fig. 9)